



WP1884WP2484WP3084/WP3684WP1890WP2490/WP3090/WP3690WP1896WP2496/WP3096/WP3690

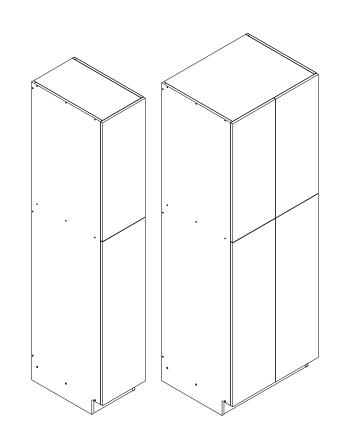


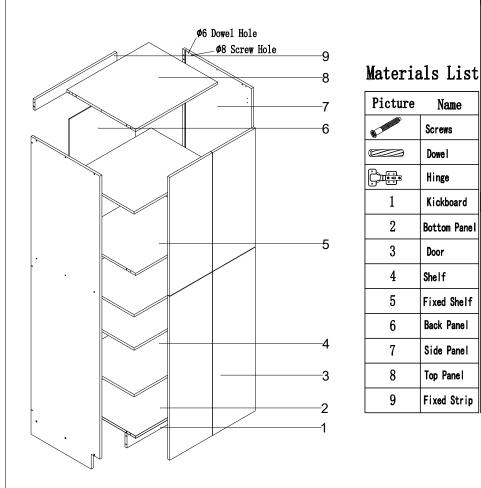

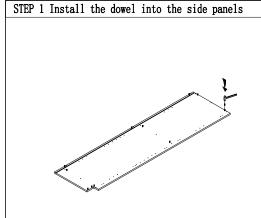



Step 2 keep the side plate flat on the floor, then insert top and bottom panel and fixing shelf

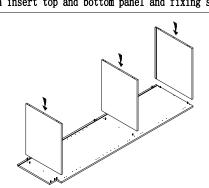

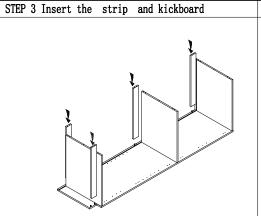


STEP 4 Insert the back panel.

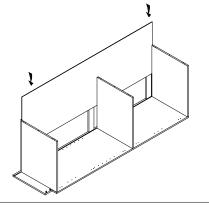

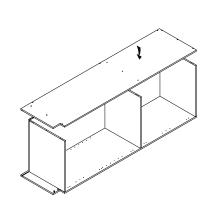


STEP 5 Put another side panel

STEP 6 Turn the screw into the screw hole

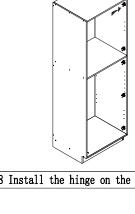


STEP 7 Fix the hinge base one the side panel

STEP 8 Install the hinge on the door.

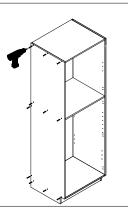


Picture	Name	
N. Managara	Screws	
	Dowel	
	Hinge	
1	Kickboard	
2	Bottom Panel	
3	Door	
4	Shelf	
5	Fixed Shelf	
6	Back Panel	
7	Side Panel	
8	Top Panel	
9	Fixed Strip	

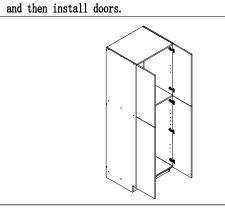



STEP 9 Press the hinges into the base,


STEP 10 Install the shelf support and shelf.

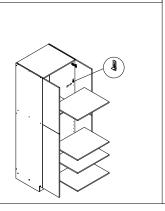



STEP 11 Accessibled Finished.

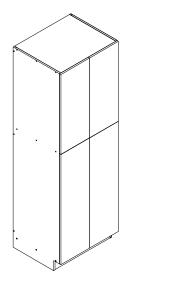


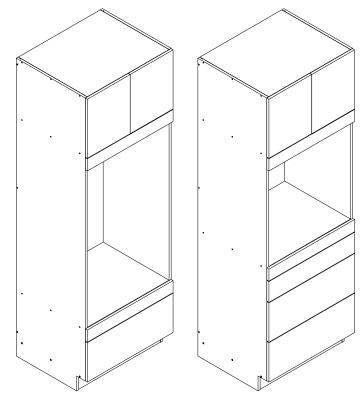


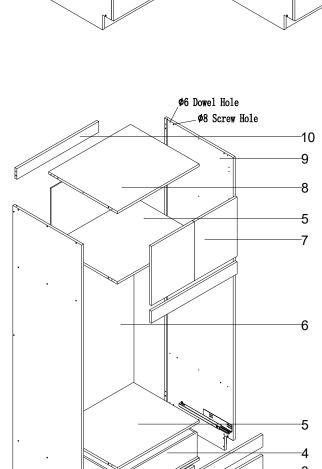





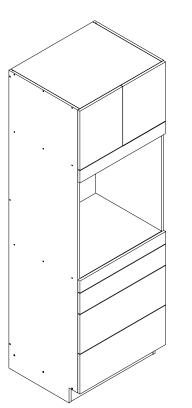


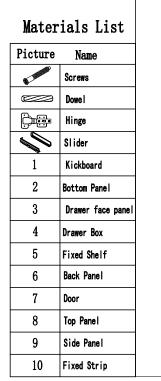

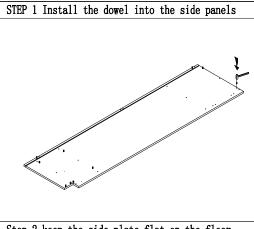




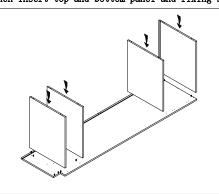


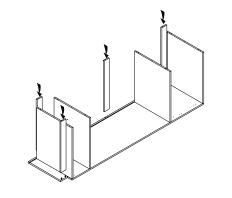


STEP 3 Insert the strip and kickboard

STEP 4 Insert the back panel.

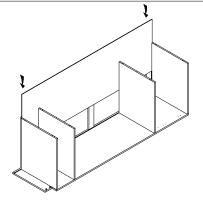





STEP 5 Put another side panel

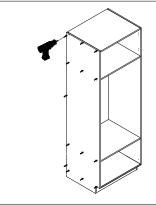


STEP 7 Fix the hinge base one the side panel and the hinge on the door.

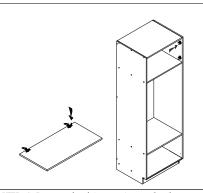


STEP 8 Press the hinges into the base, and then install doors.

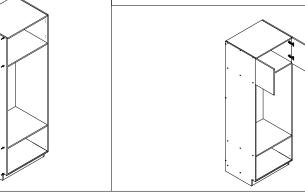



STEP 9 Install the slider STEP 10 Drawer composition

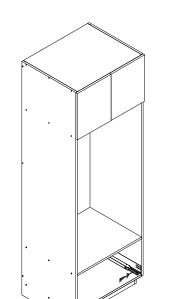




STEP 11 Install drawer front panel

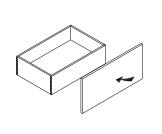



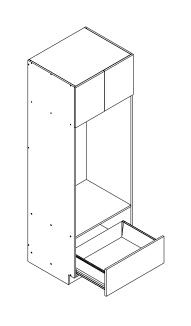

STEP 12 Put the the drawer to the carcase cabinet accessibled finished.

STEP 13 install the angle bracket on side panel, and connect the 3'' fixed panel accessibled finished.

