

VDB12-3-VDB24-3

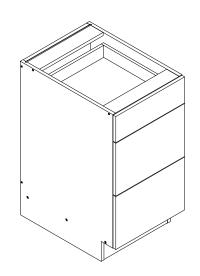

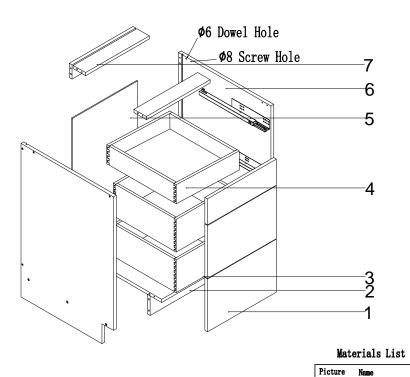

Dowel
Slider
1 Door

 2
 Kickboard


 3
 Bottom Panel

 4
 Drawer box

 5
 Back Panel


 6
 Side Panel

 7
 Fixed Strip

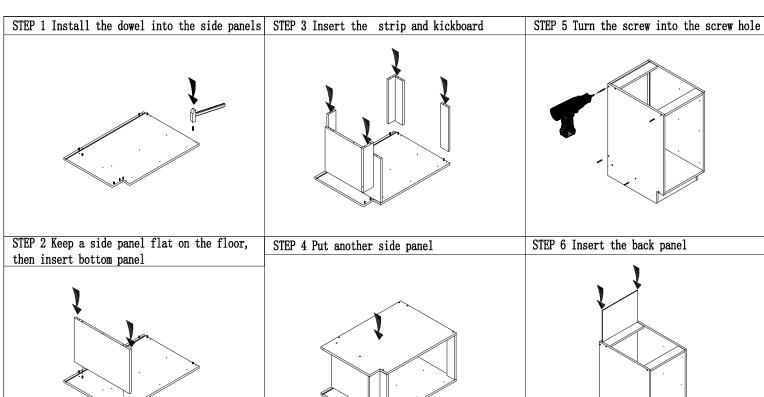



STEP 7 Install the slider

STEP 8 Drawer composition

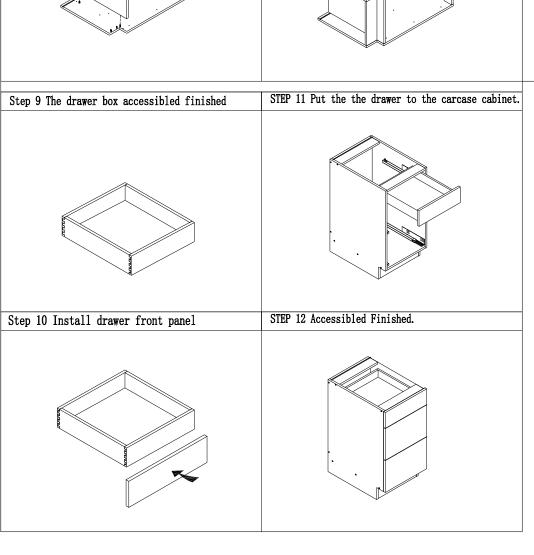



VA24-VA36

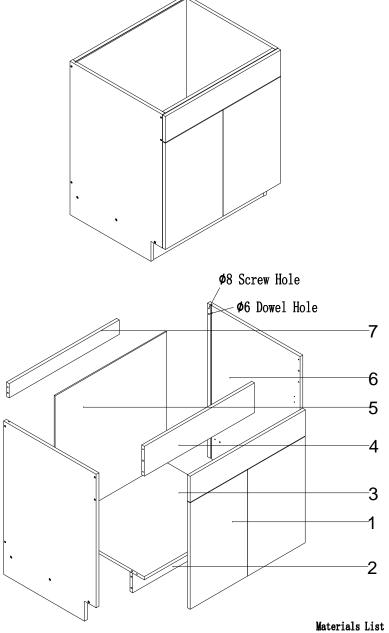





Picture Name Screws COD Dowel Hinge
1 Door 2 Kickboard 3 Bottom Panel 4 Filler 5 Back Panel 6 Side Panel 7 Fixed Strip

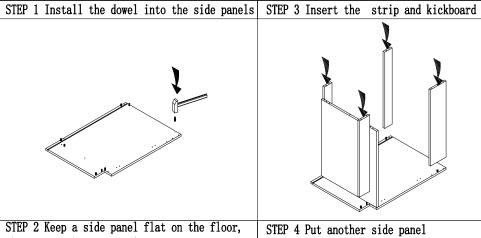

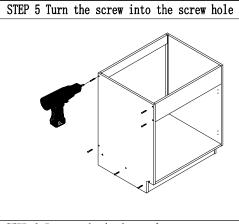


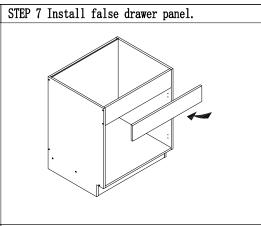

STEP 2 Keep a side panel flat on the floor, then insert bottom panel

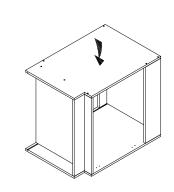



STEP 6 Insert the back panel.

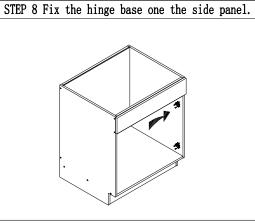

STEP 9 Install the hinge on the door.





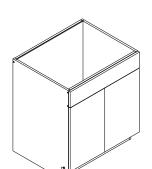

STEP 10 Press the hinges into the base, and then install doors.

