



INSET BASE CABINET


18

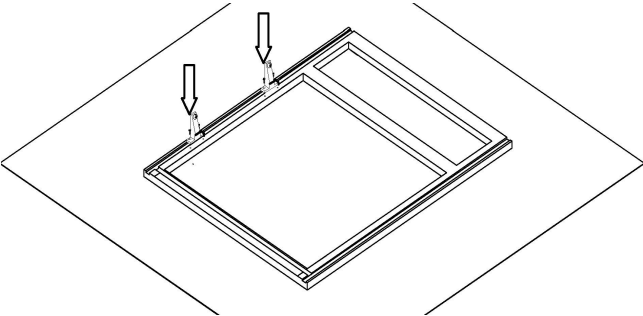


T.

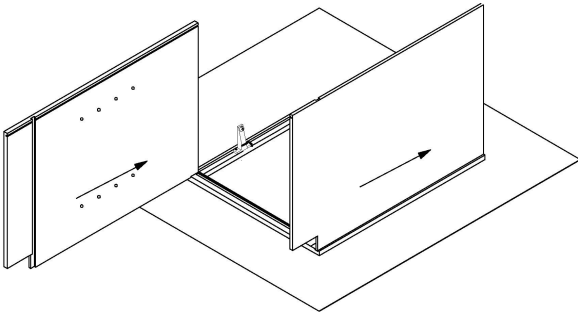


Y.

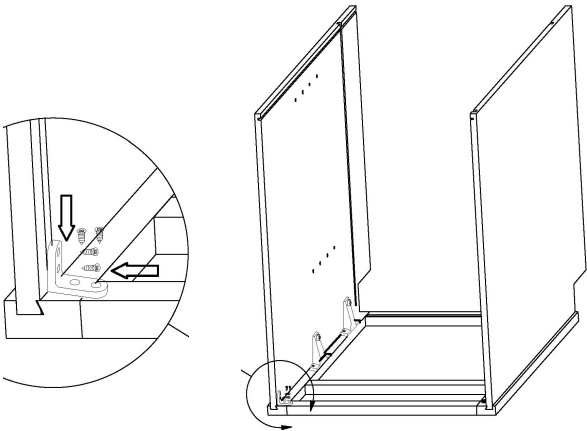


4.

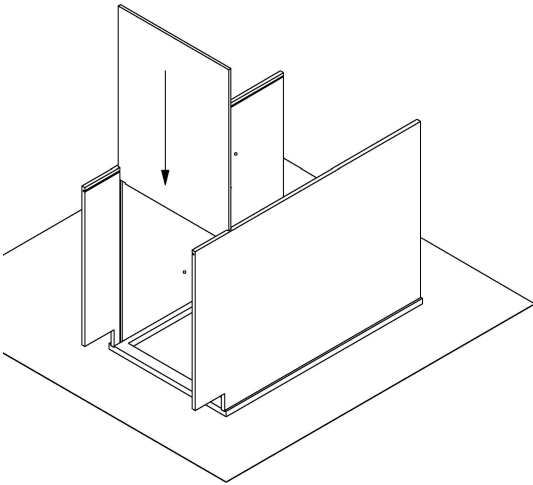


X8

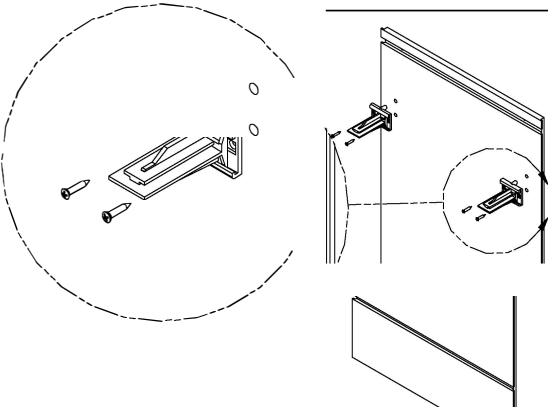


Ψ.

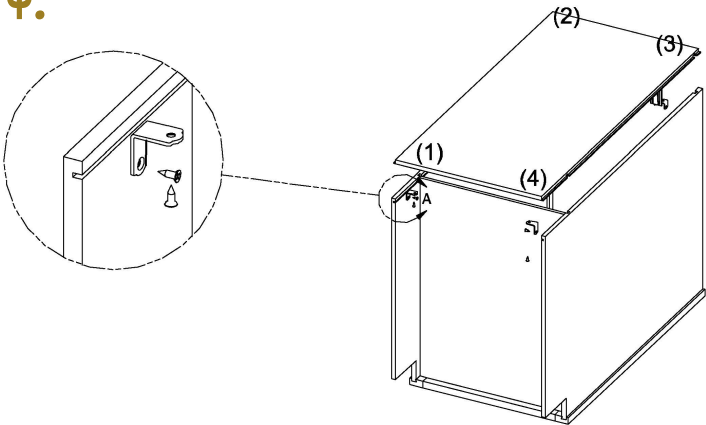


7.

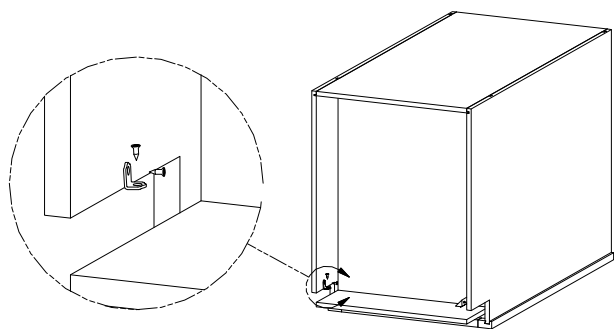


8.

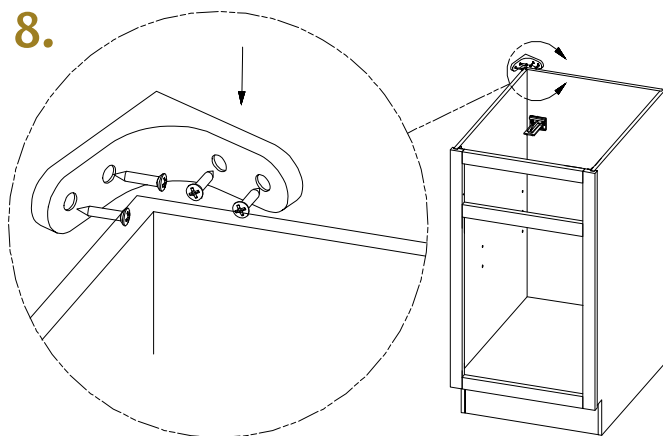

9.

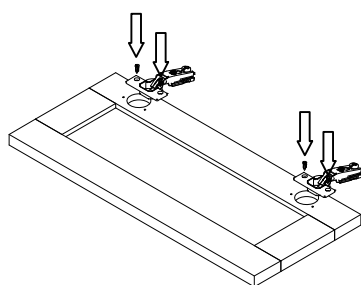


10.

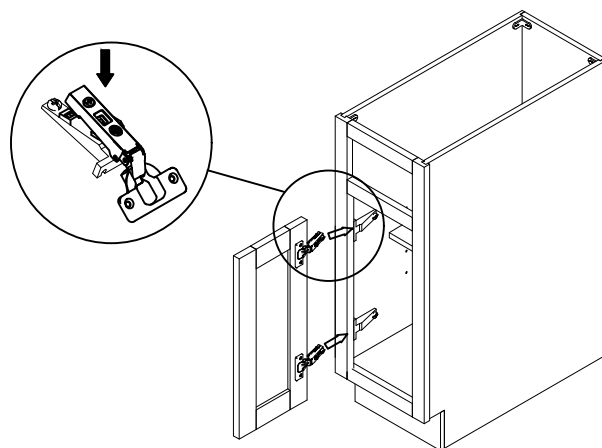


11.


Hinge installation and adjustment

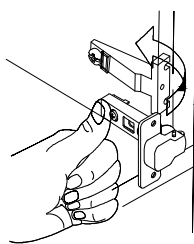


Click and lock

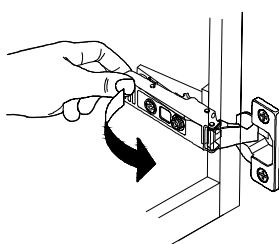


Click and remove

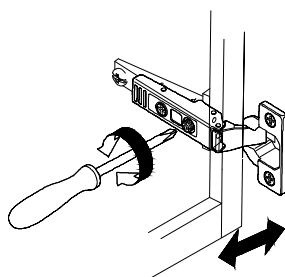

Side adjustment

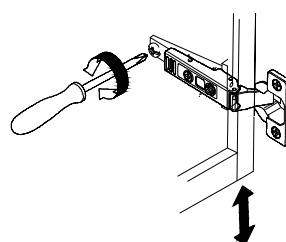


Up&down adjustment

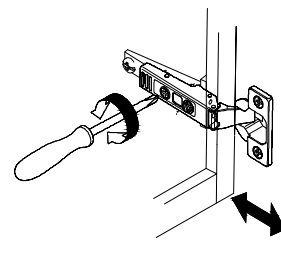


Depth adjustment


12.

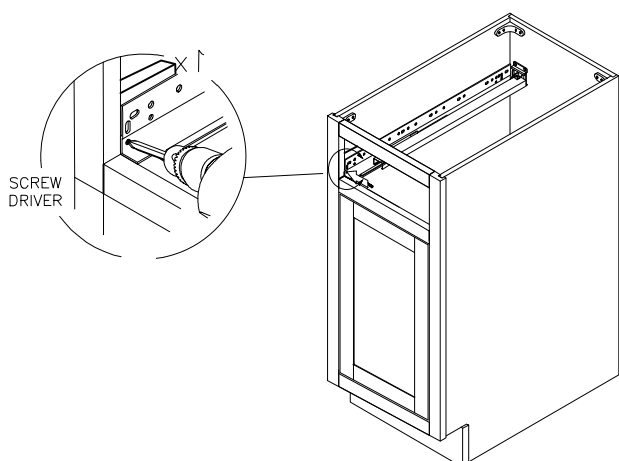


13.

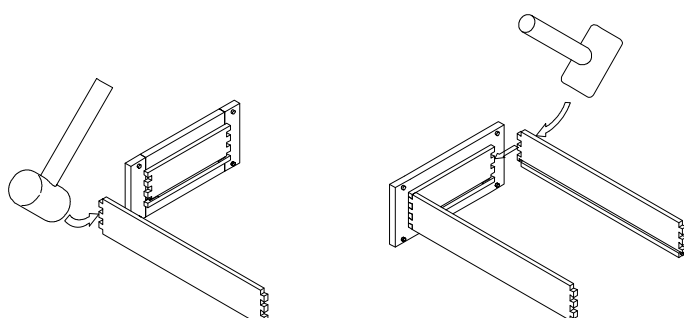

14.

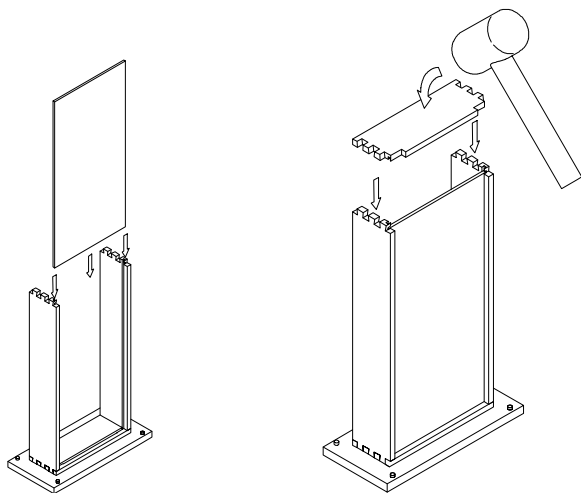


15.

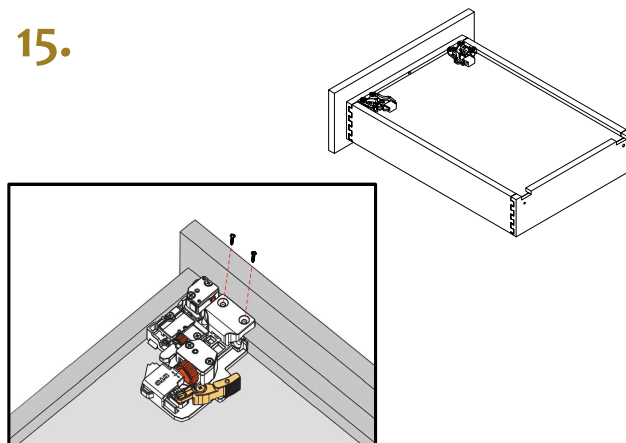


Put the adjusting part back and tighten the screws.

16.

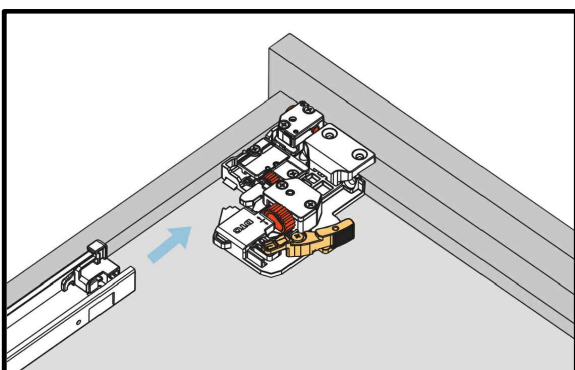


Lay the drawer bottom onto the slide then push the drawer into the cabinet.

17.

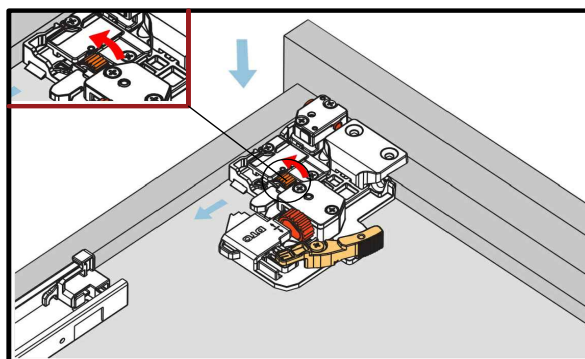


Up&Down adjustment.

18.

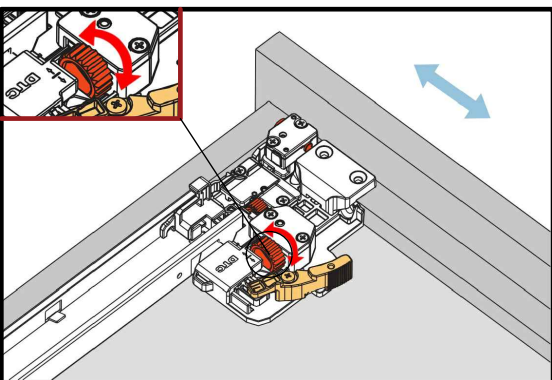


Side adjustment.

19.

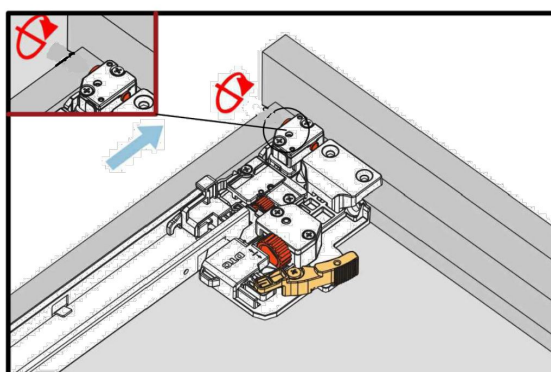


Depth adjustment.

20.

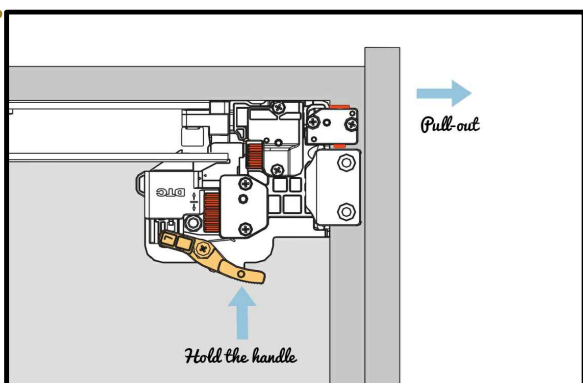


Removal.

21.

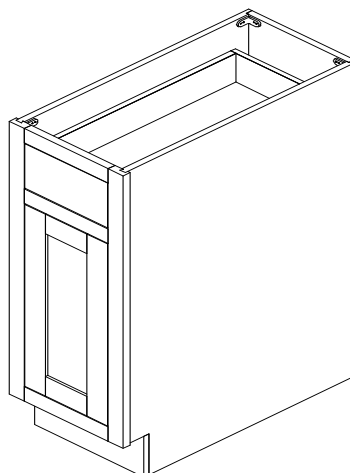


INSET BASE FULL HEIGHT DOOR CABINET


1.

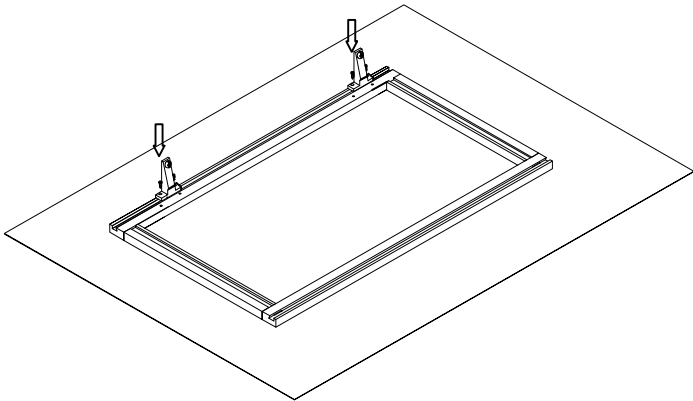


2.

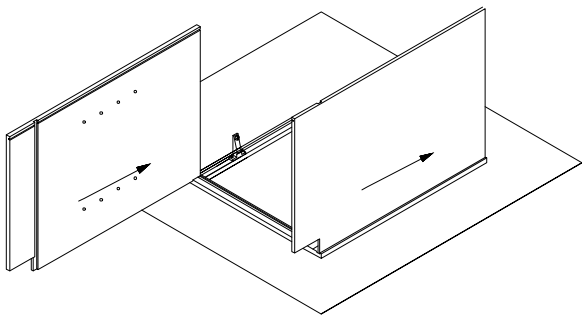


3.

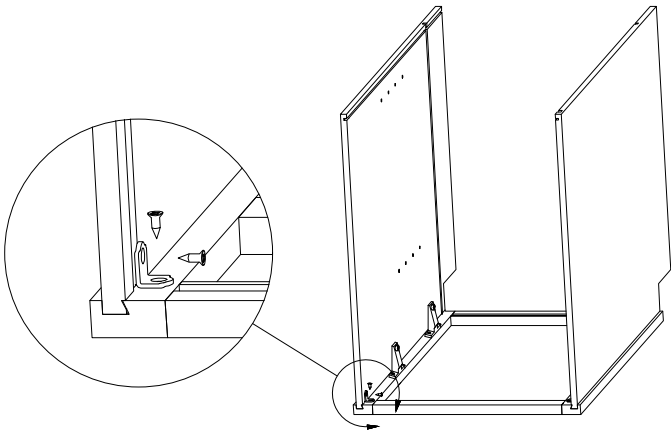


4.

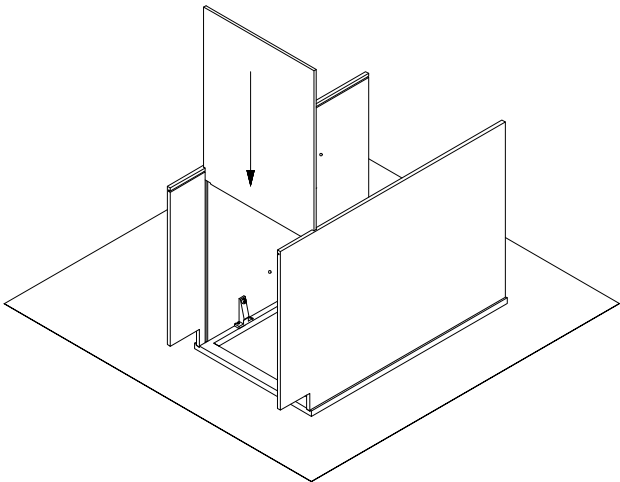


5.

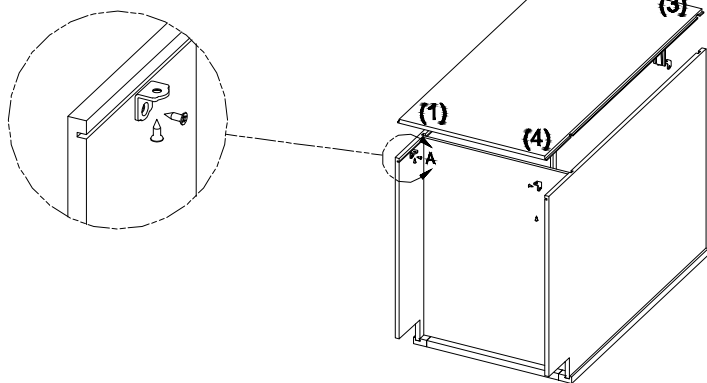


6.

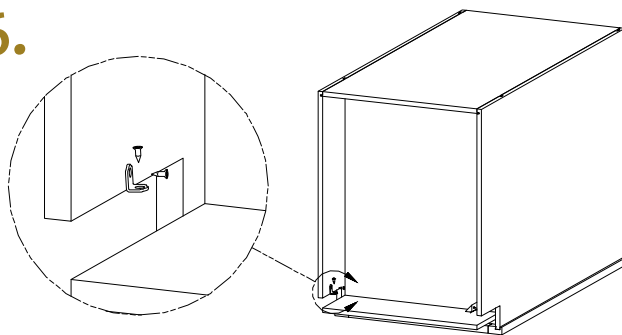


7.

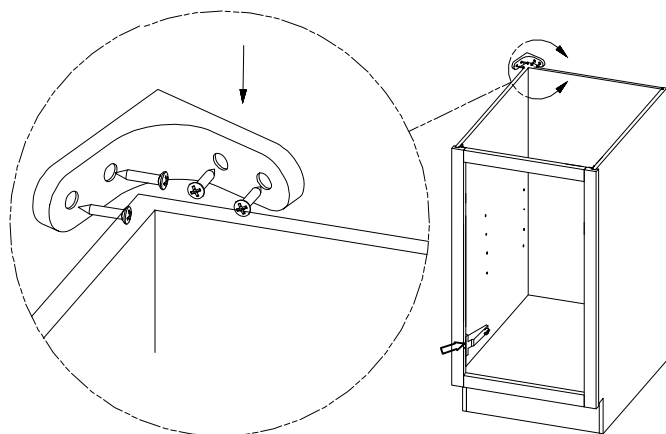


8.

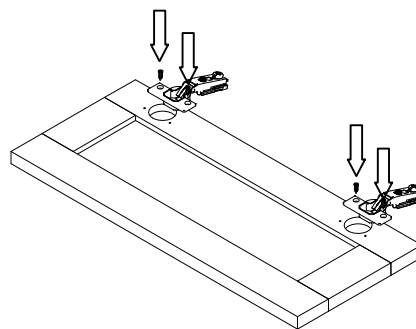

9.

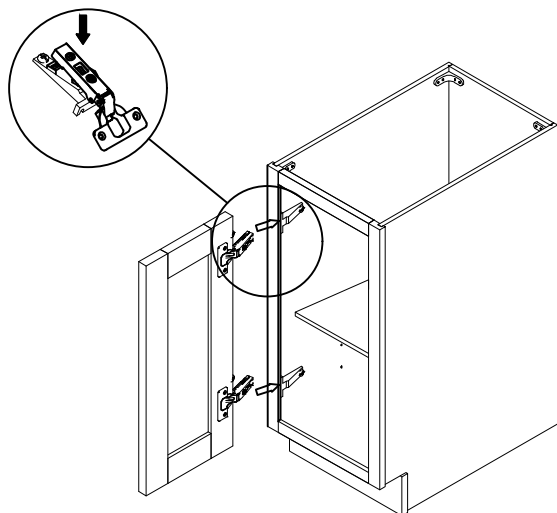


10.

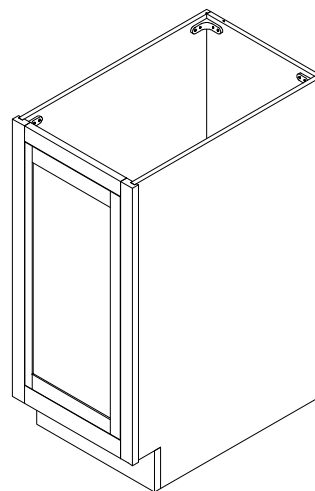


11.


Hinge installation and adjustment

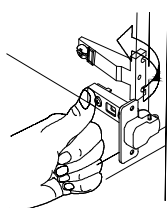


Click and lock

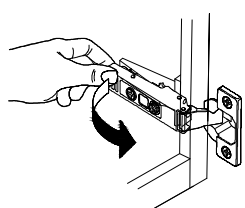


Click and remove

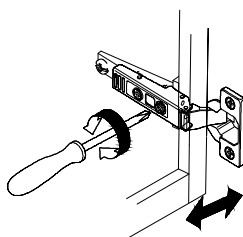

Side adjustment

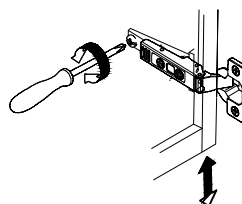


Up&down adjustment

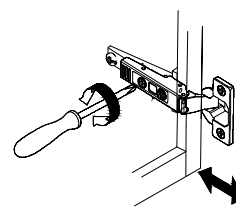


Depth adjustment

INSET WASTE-BIN CABINET


18

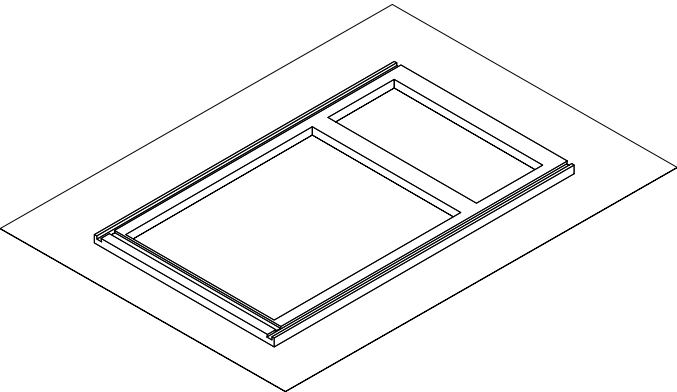


T.

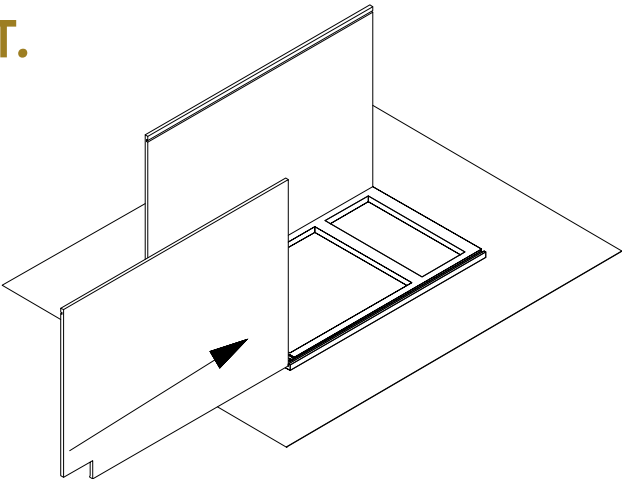


Y.

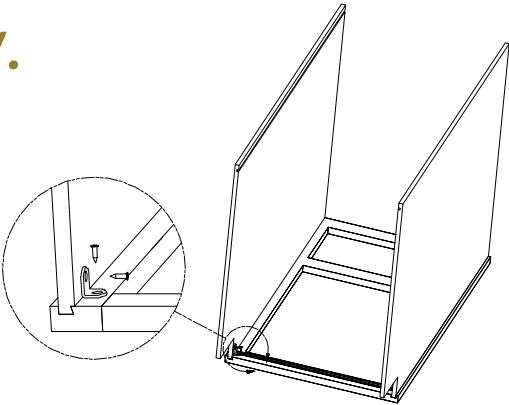


4.

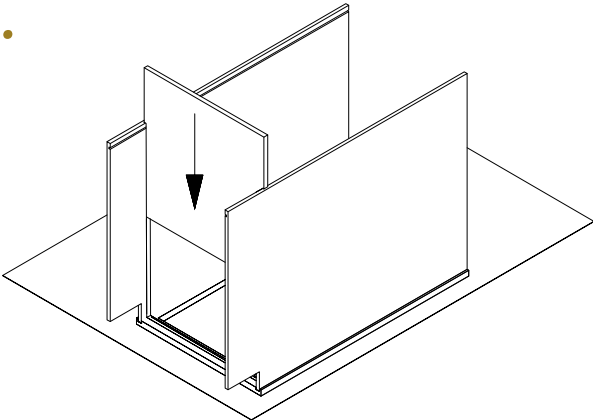


X8

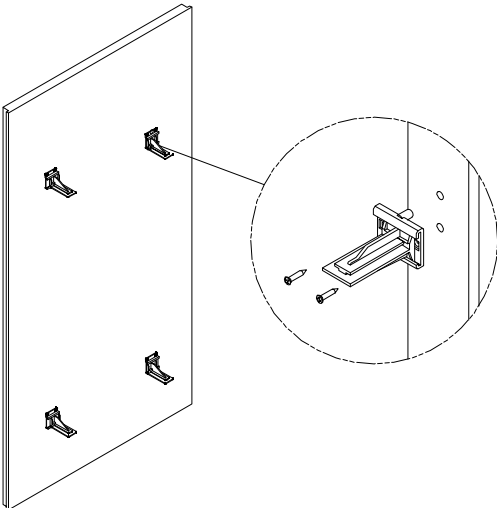


Ψ.

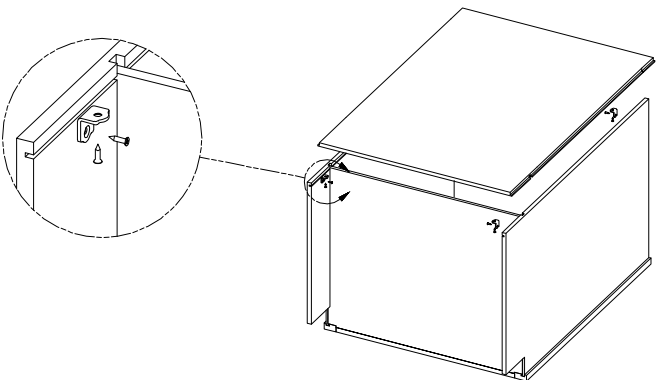


7.

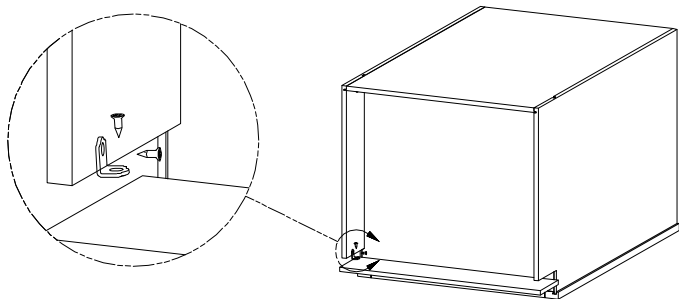


8.

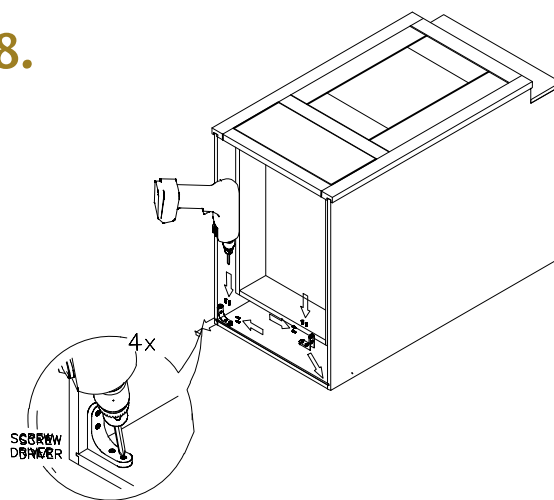


9.

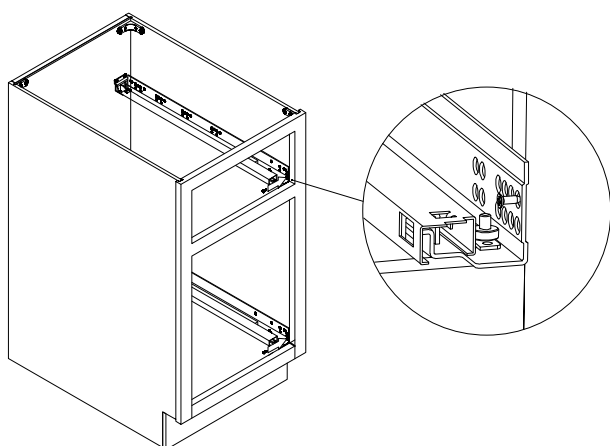


10.

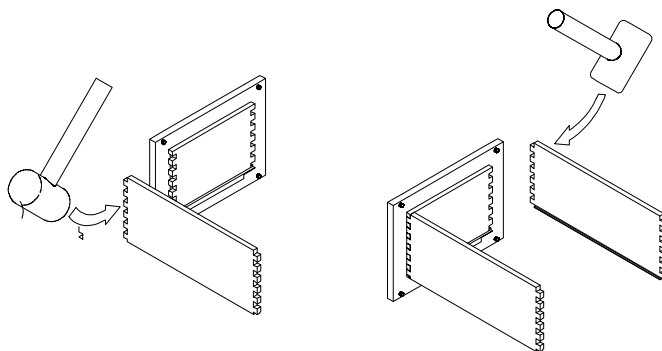


11.

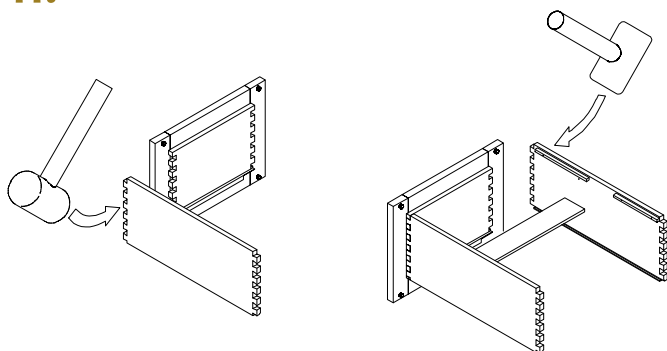

12.

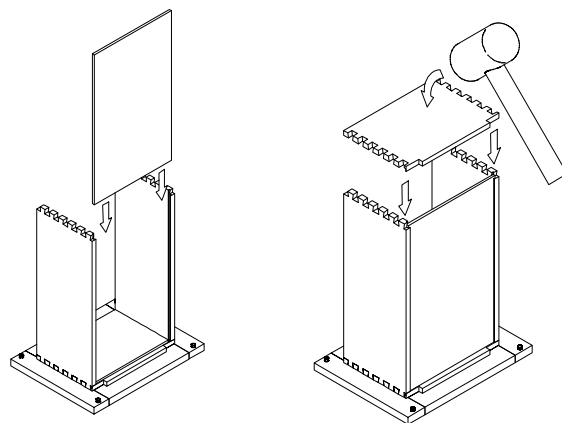


13.

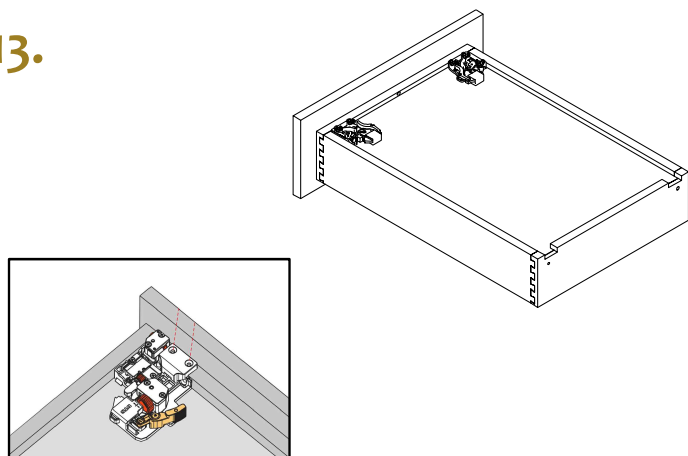


Put the adjusting part back and tighten the screws.

14.

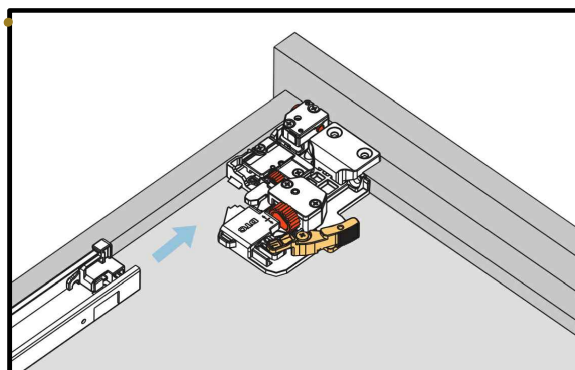


Lay the drawer bottom onto the slide then push the drawer into the cabinet.

15⁸

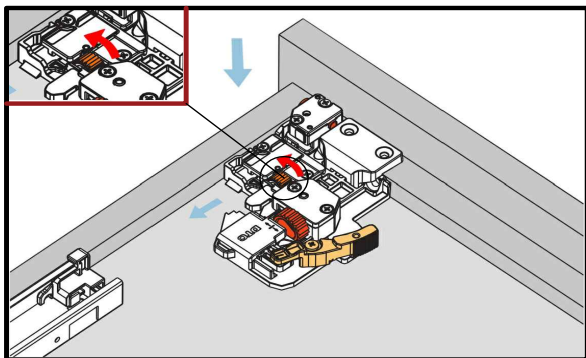


Up&Down adjustment.

16.

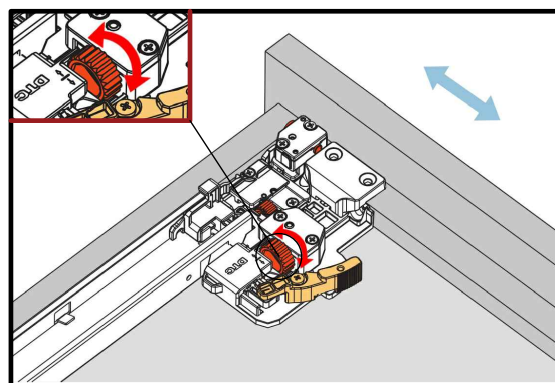


Side adjustment.

17.

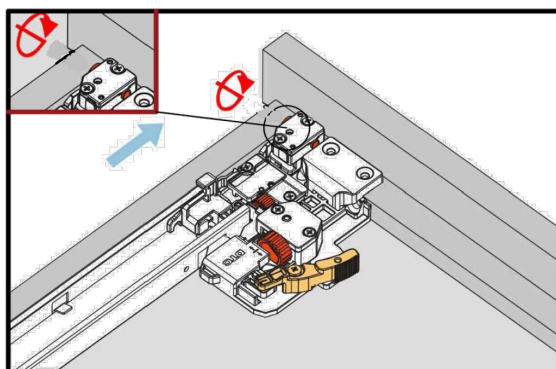


Depth adjustment.

18.

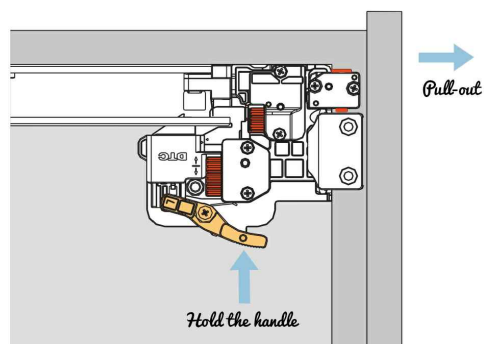


Removal.

19⁸

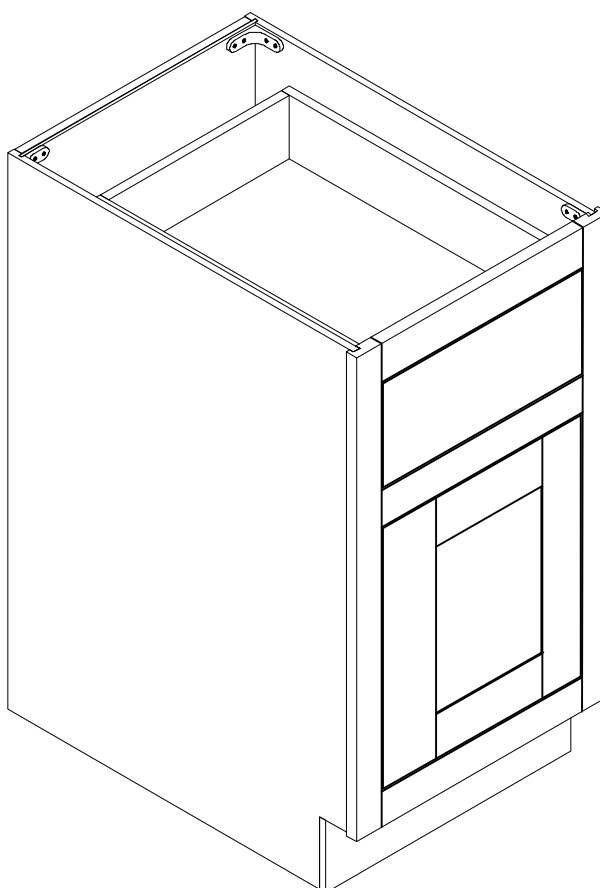


INSET DRAWER BASE CABINET


1.

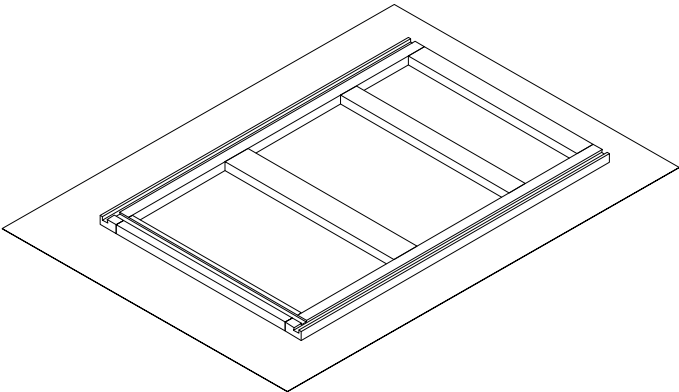


2.

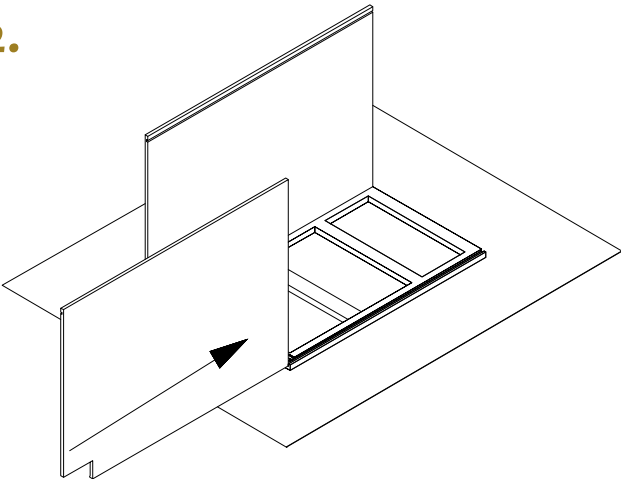


3.

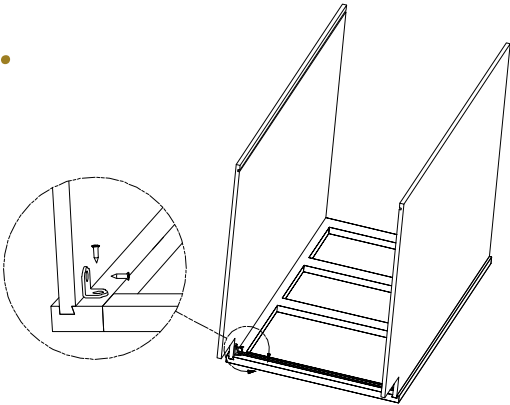


4.

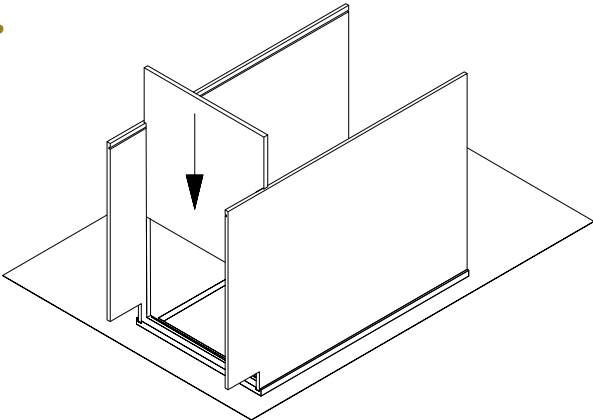


5.

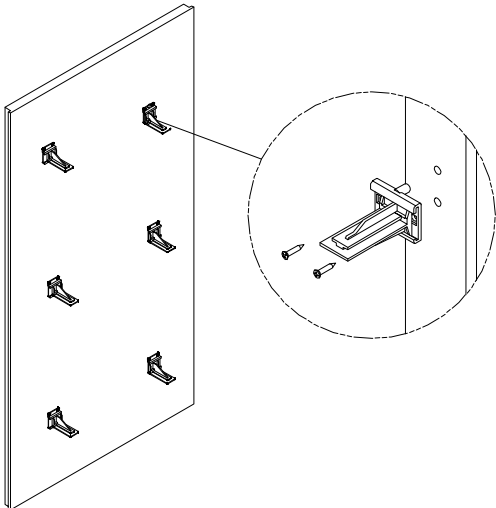


6.

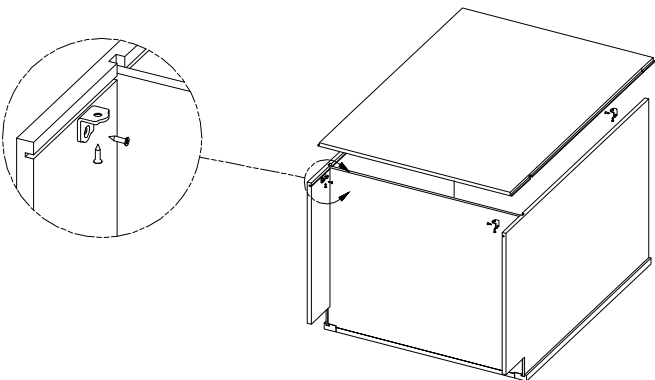


7.

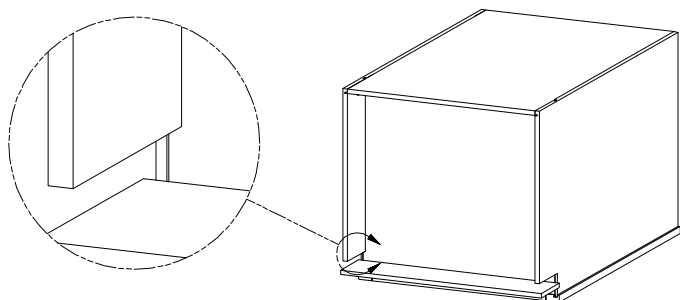


8.

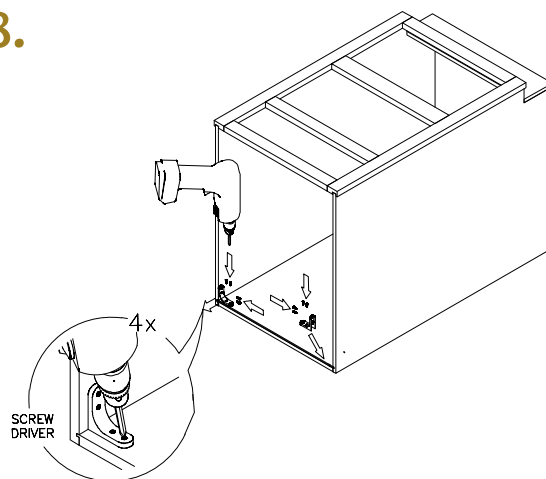


9.

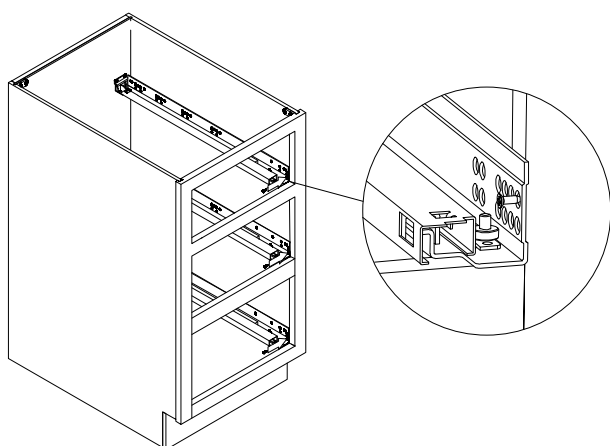


10.

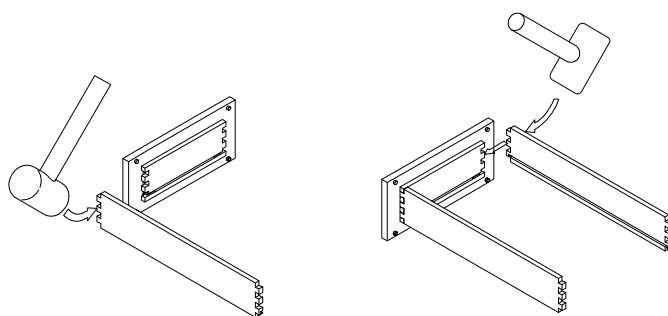


11.

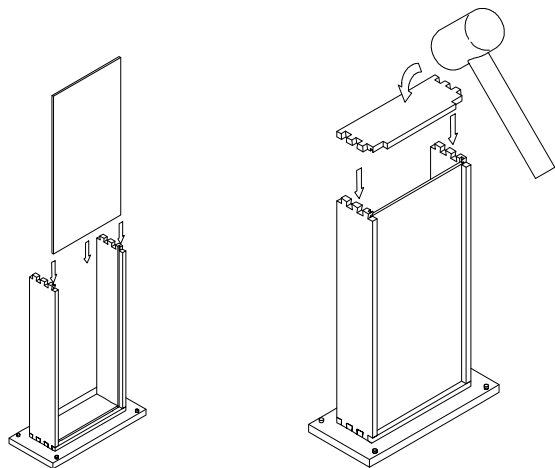


12.

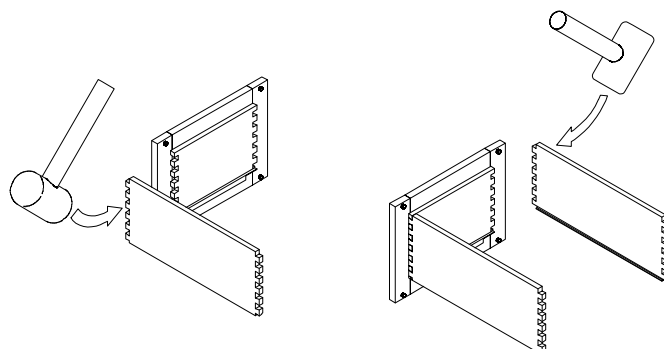

13.

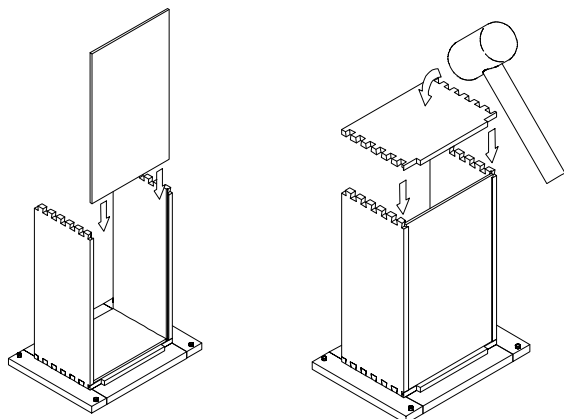


14.

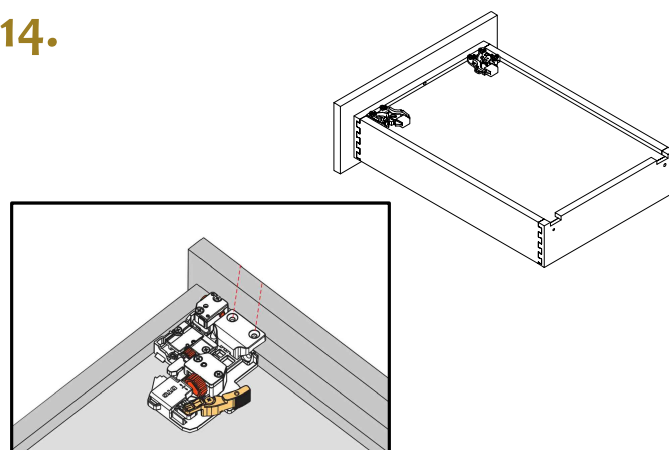


Put the adjusting part back and tighten the screws.

15.

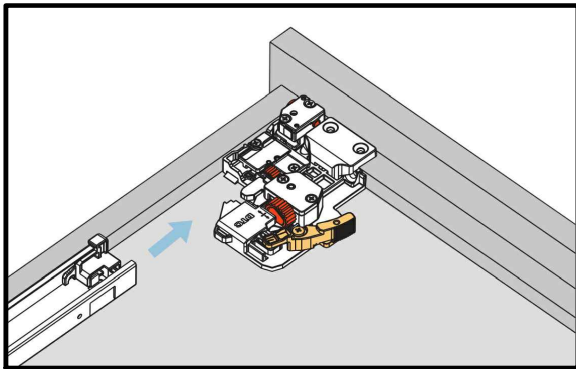


Lay the drawer bottom onto the slide then push the drawer into the cabinet.

16.

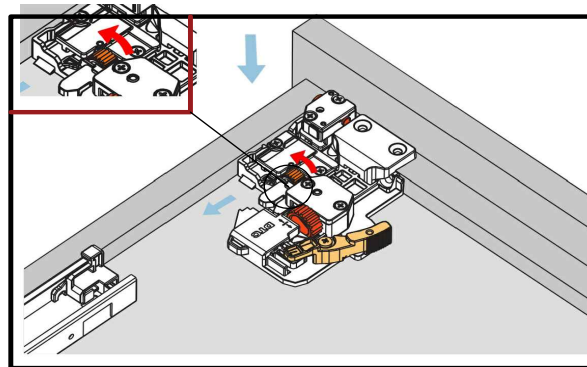


Up&Down adjustment.

17.

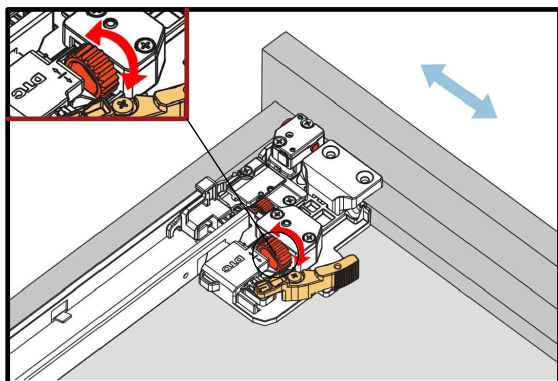


Side adjustment.

18.

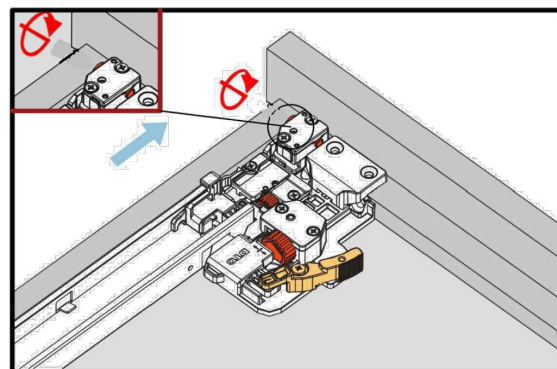


Depth adjustment.

19.

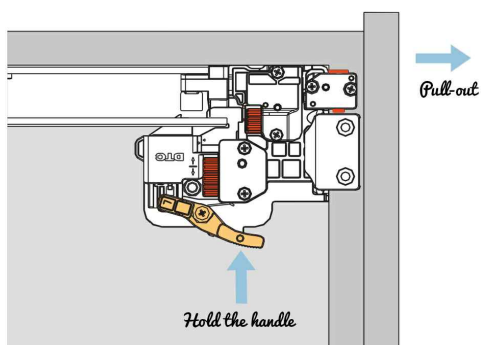


Removal.

20.

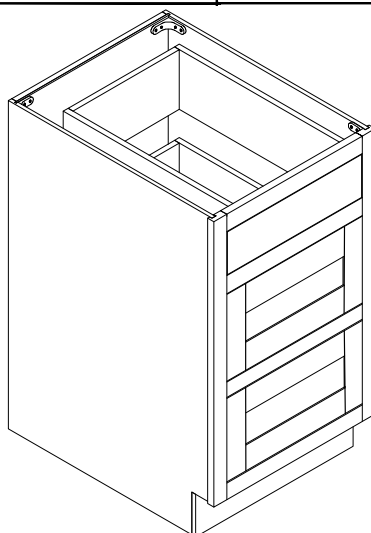


INSET SINK BASE CABINET

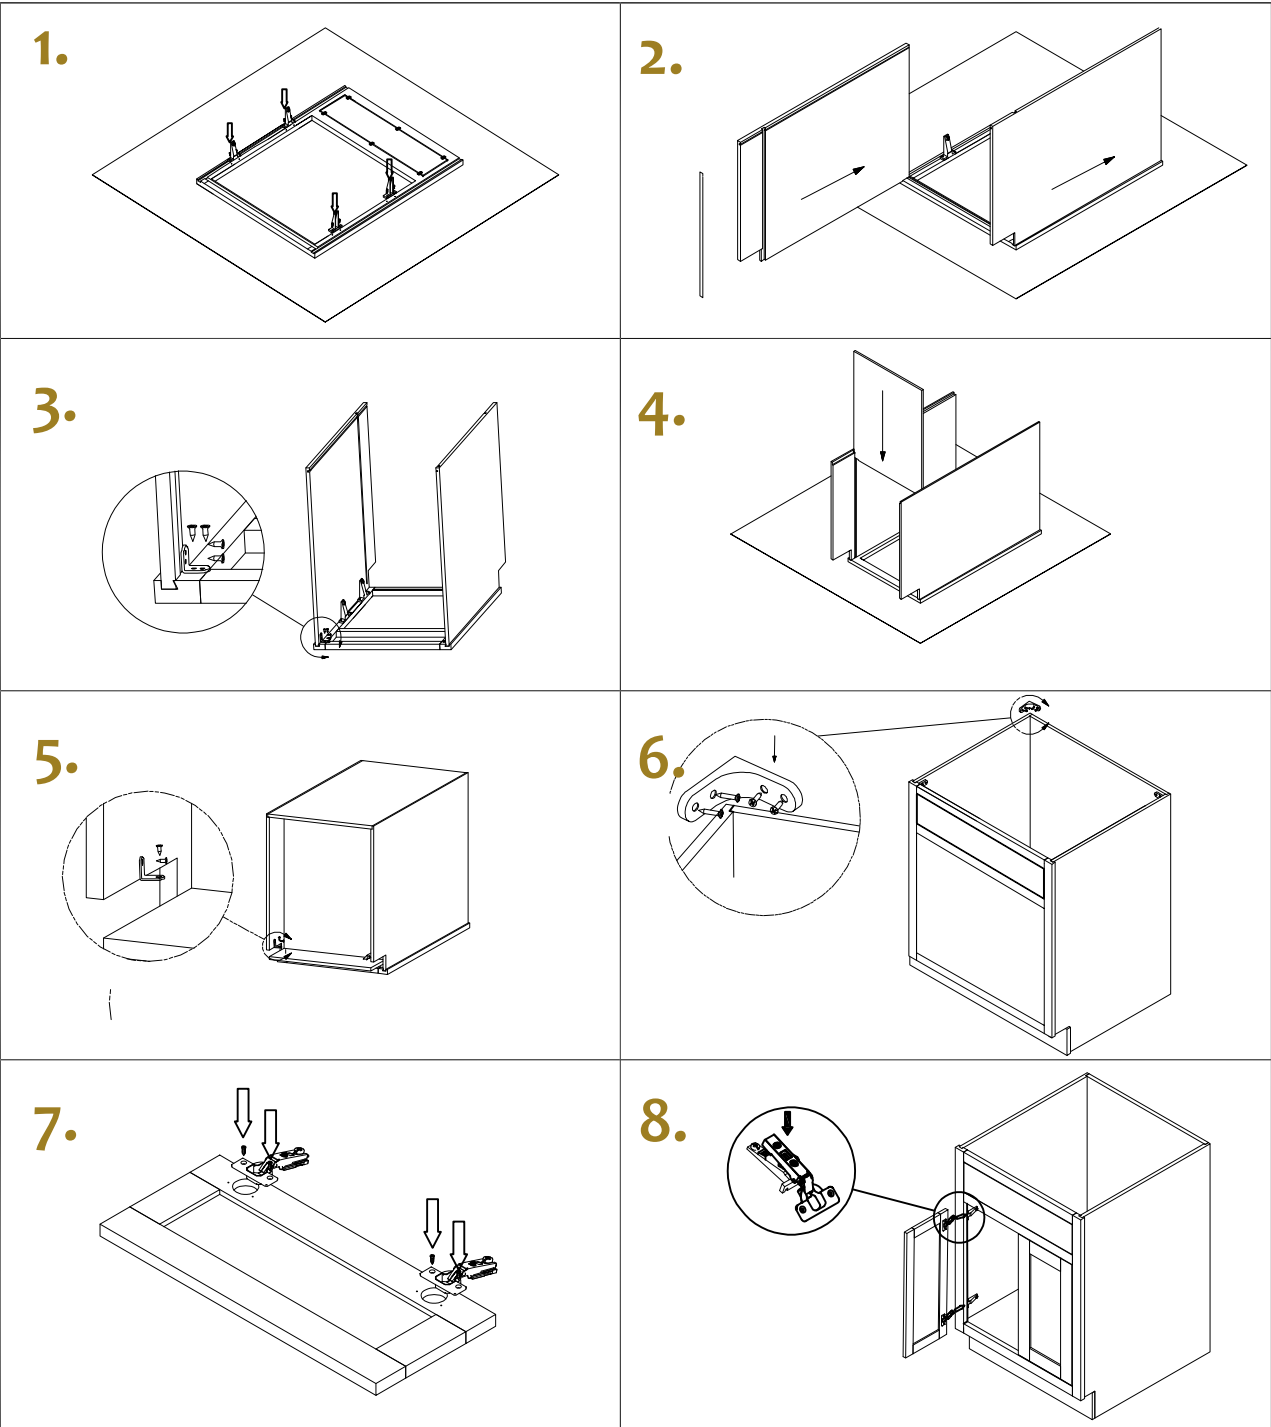


9.


Hinge installation and adjustment

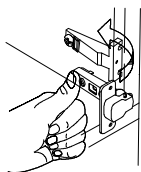


Click and lock

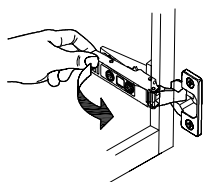


Click and remove

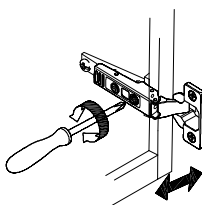

Side adjustment

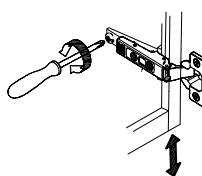


Up&down adjustment

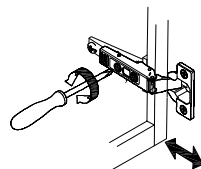


Depth adjustment

10.

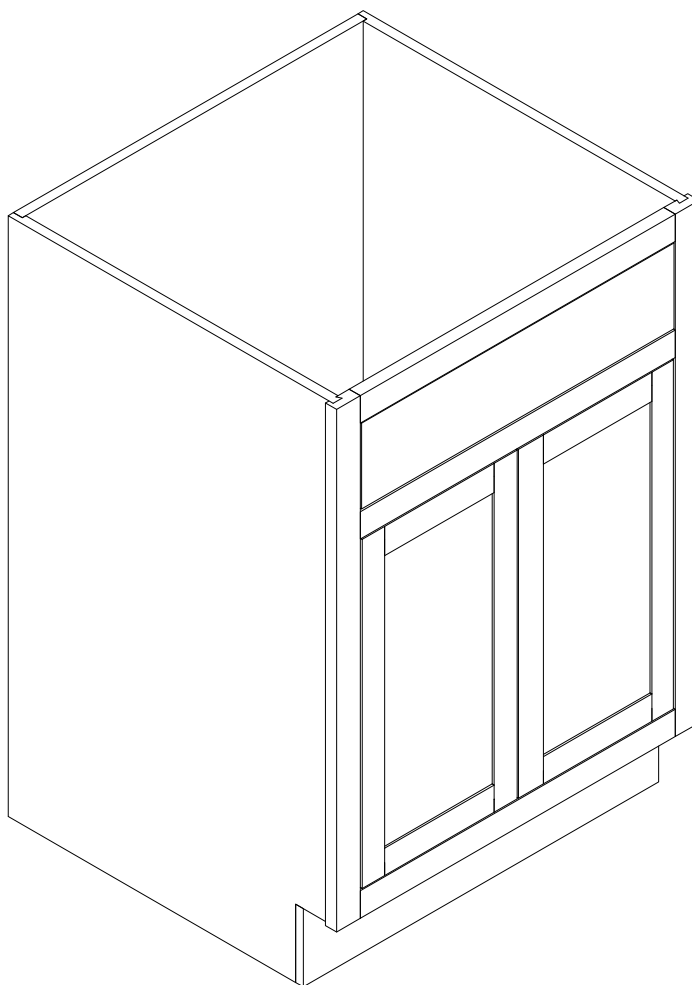


INSET FARM SINK CABINET


1.

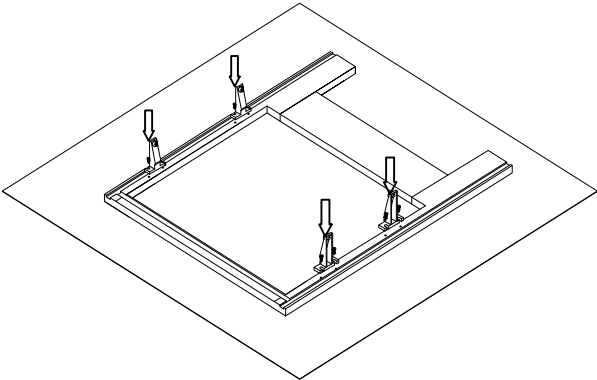


2.

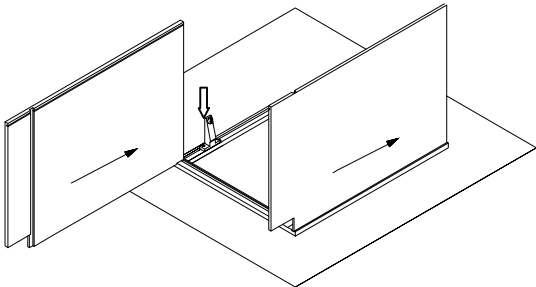


3.

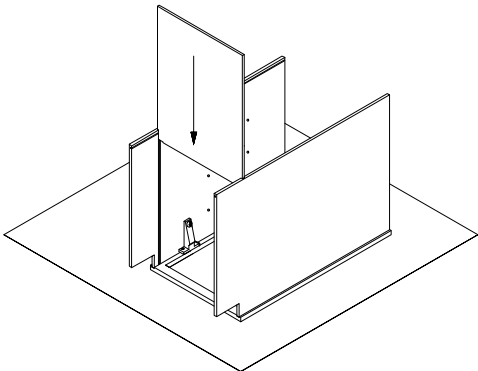


4.

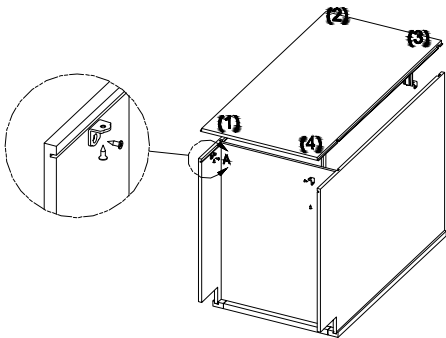


5.

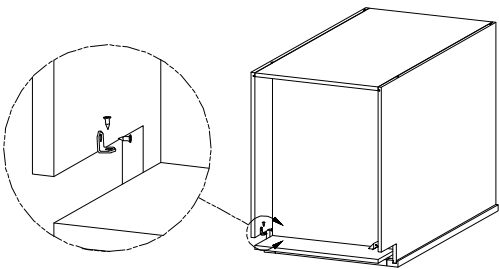


6.

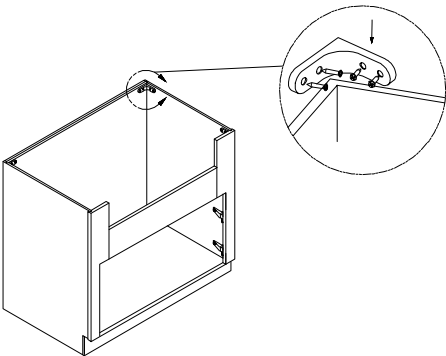

7.

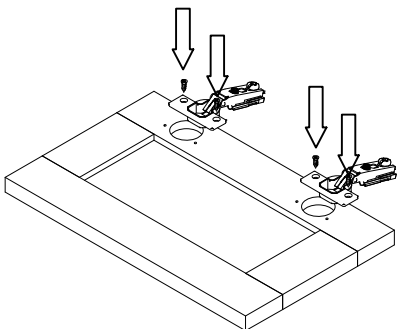


8.

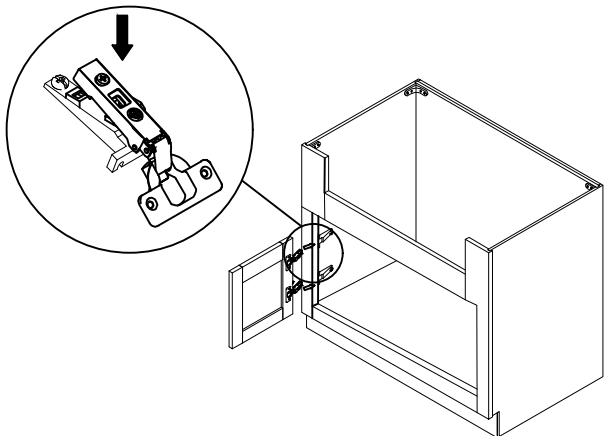

9.

Hinge installation and adjustment

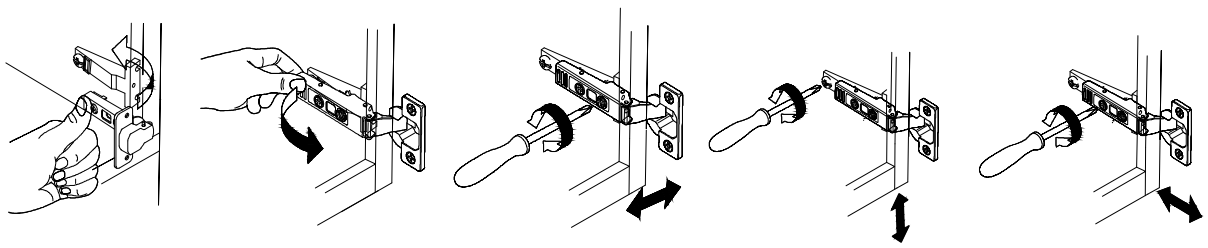

Click and lock


Click and remove

Side adjustment

Up&down adjustment


Depth adjustment

10.

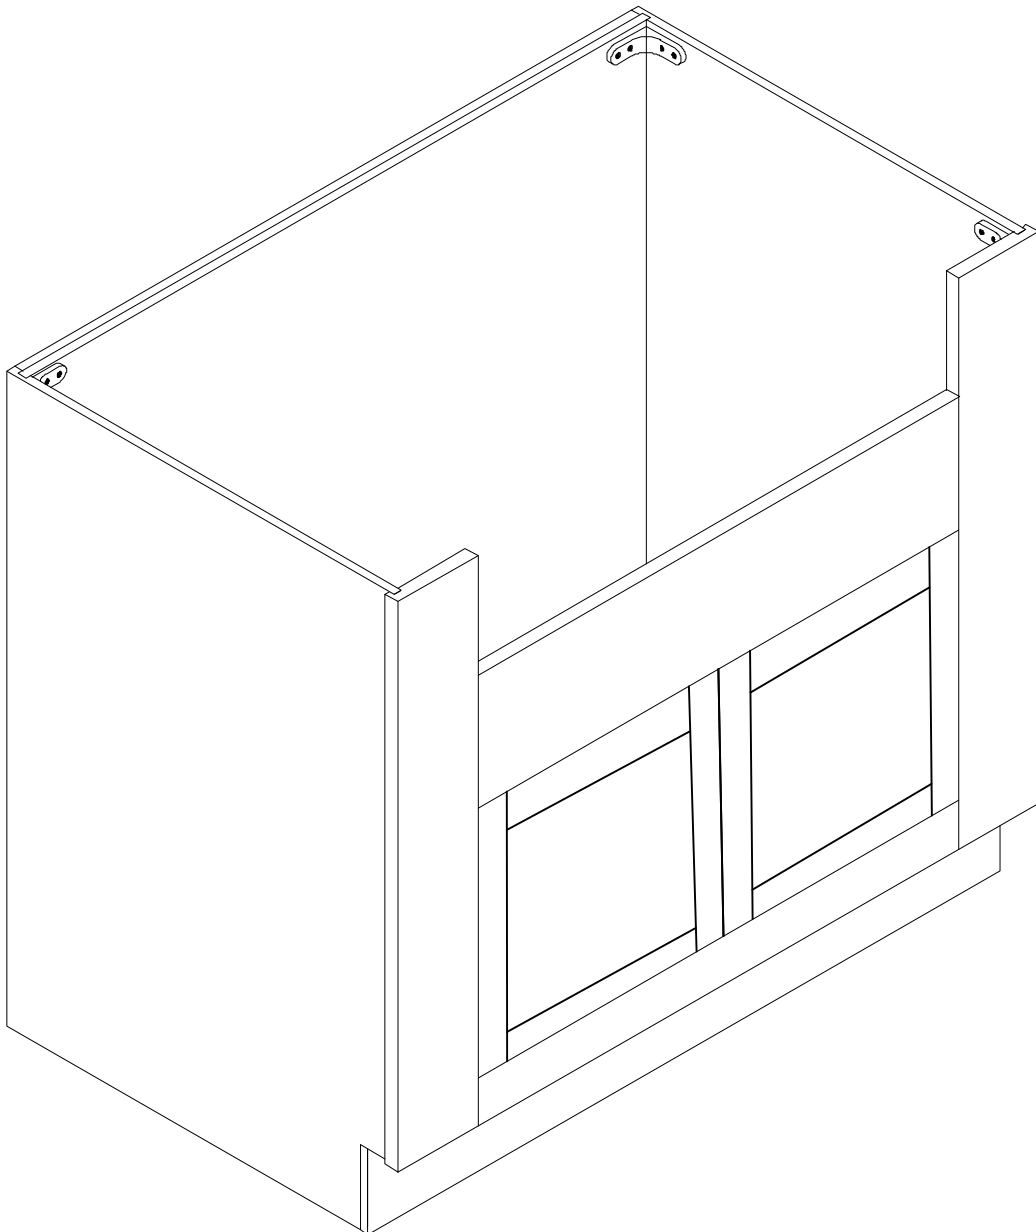


INSET BER/LAZY SUSAN CABINET


1.

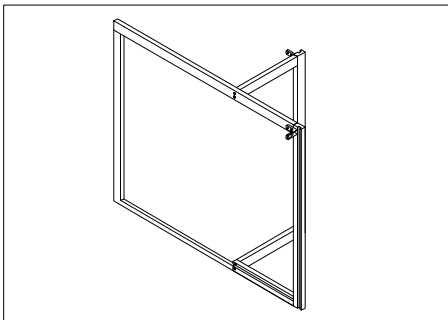


2.

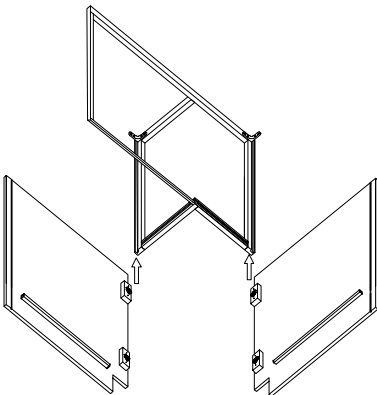


3.

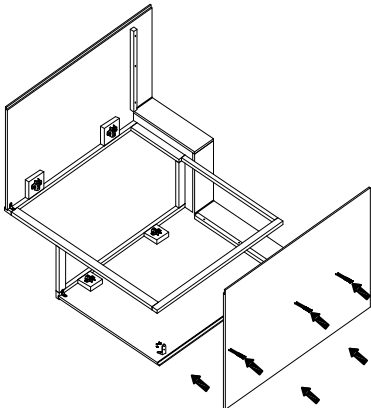


4.

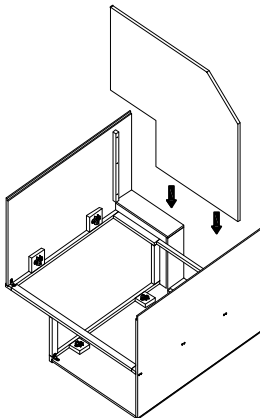


5.

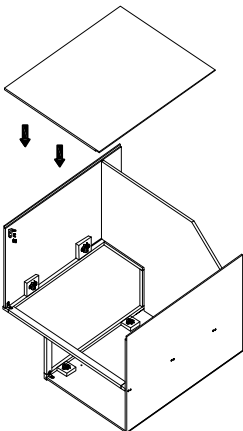


6.

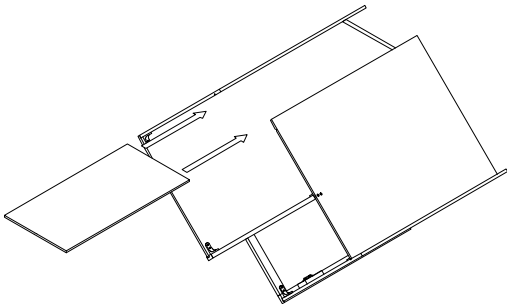


7.

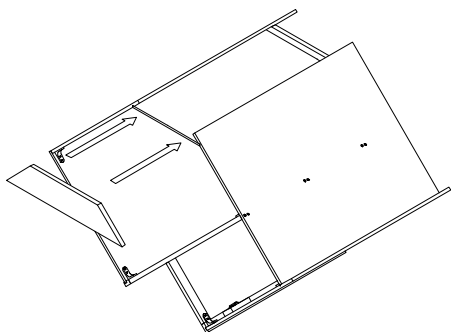


8.

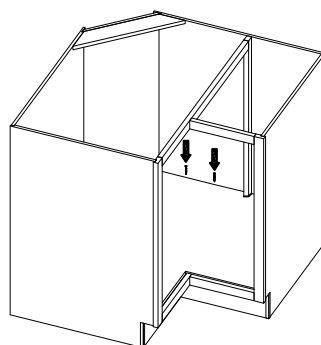

9.

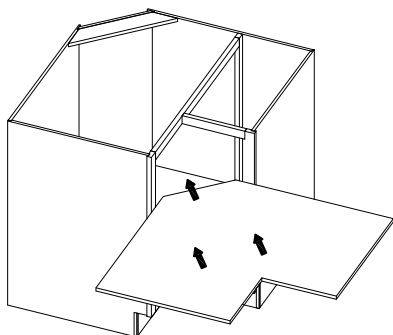


10.

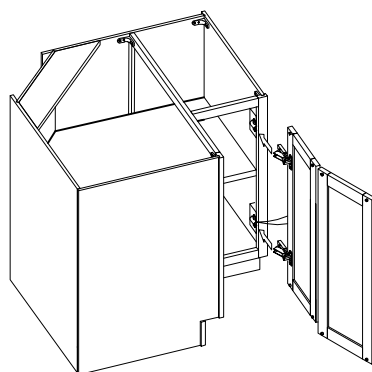


11.


Hinge installation and adjustment

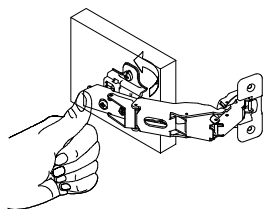


Click and lock

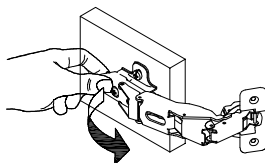

Click and remove

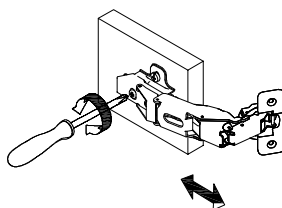

Depth adjustment

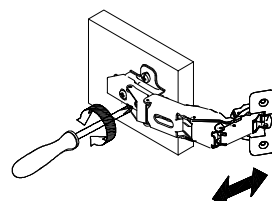

Side adjustment

12.

