



INSET VANITY w/DRAWERS BASE CABINET


1.

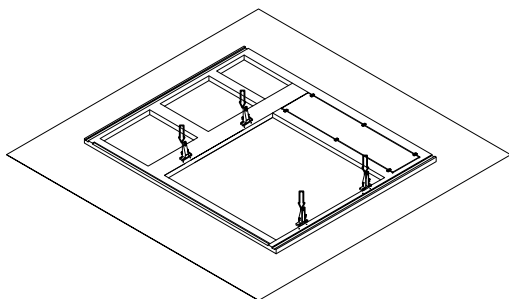


2.

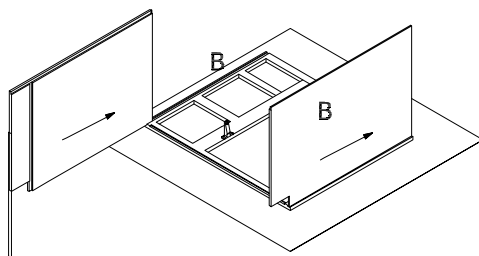


3.

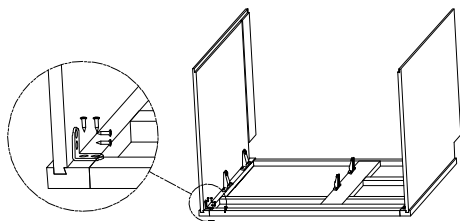


4.

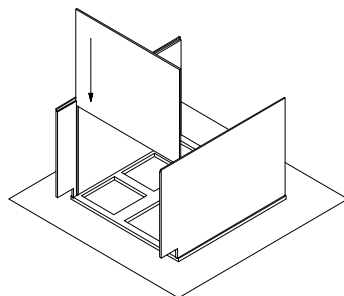


5.

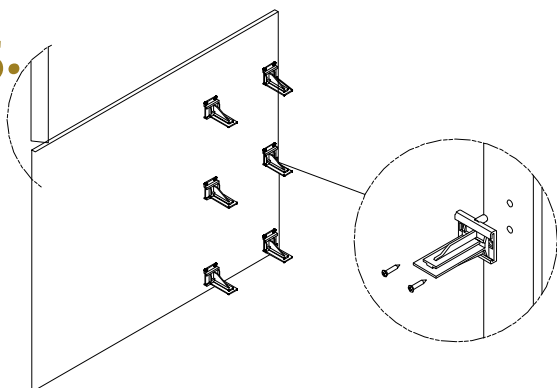


6.

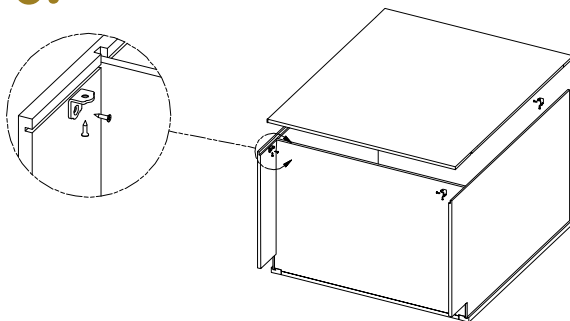


7.

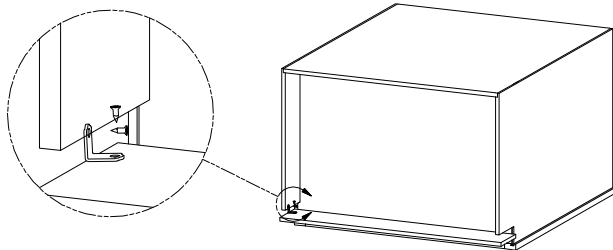


8.

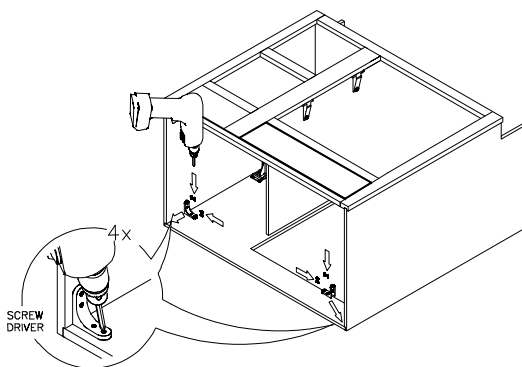

9.

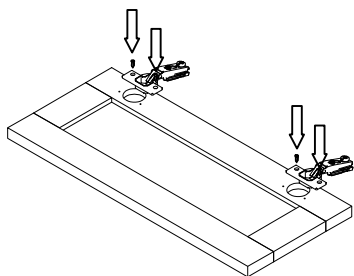


10.

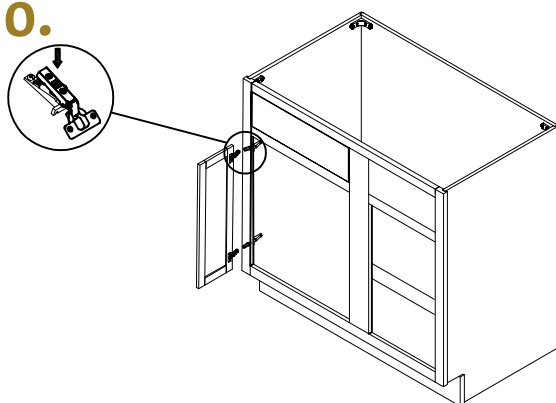


11.


Hinge installation and adjustment

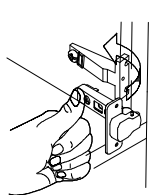


Click and lock

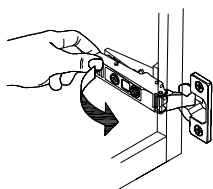


Click and remove

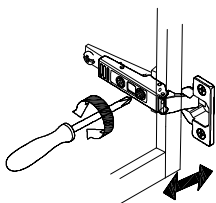

Side adjustment

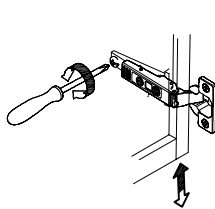


Up&down adjustment

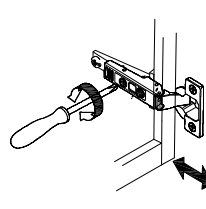


Depth adjustment


12.

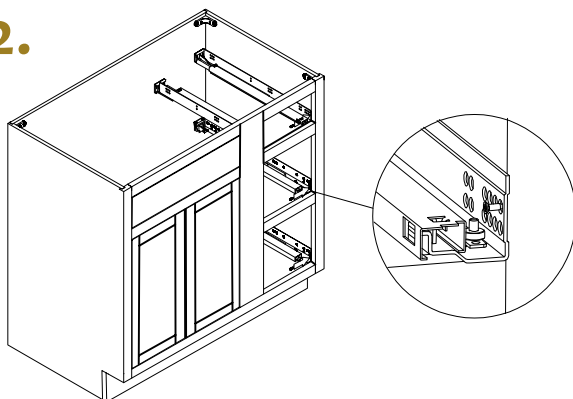


13.

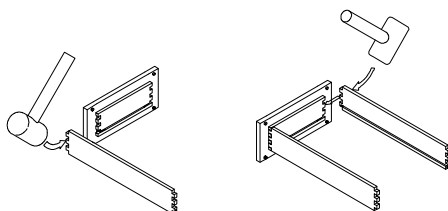


14.

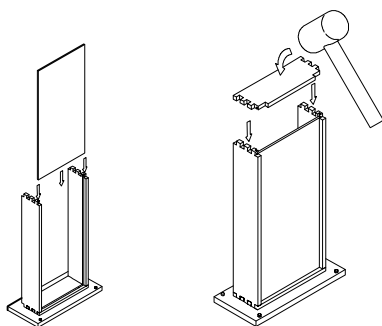


15.

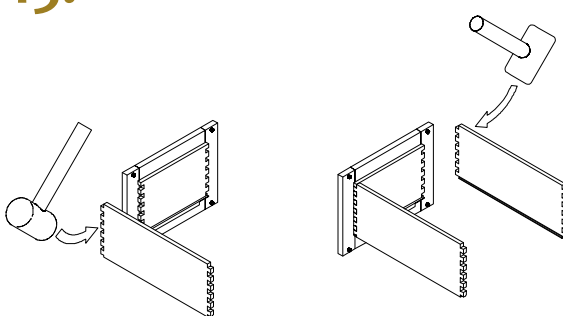

16.

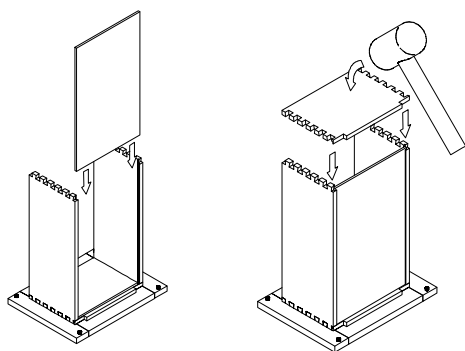


17.

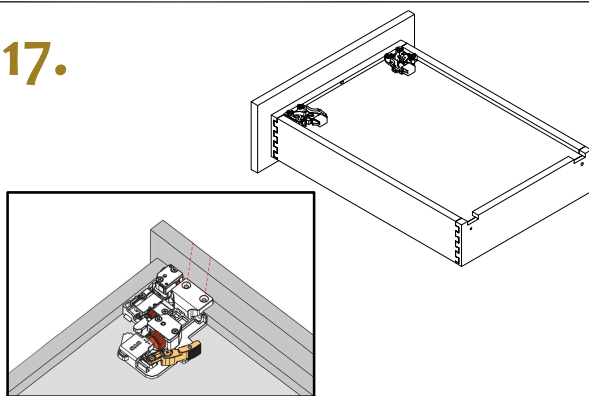


Put the adjusting part back and tighten the screws.

18.

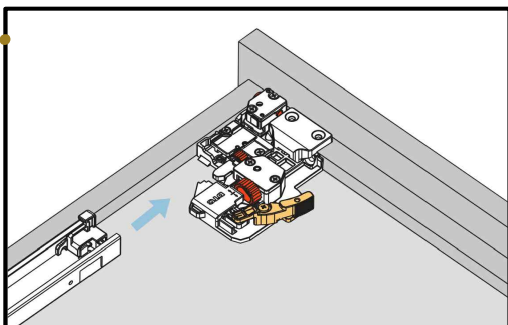


Lay the drawer bottom onto the slide then push the drawer into the cabinet.

19.

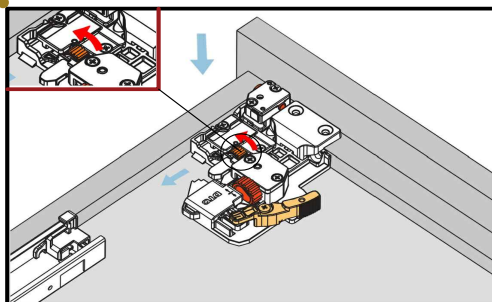


Up&Down adjustment.

20.

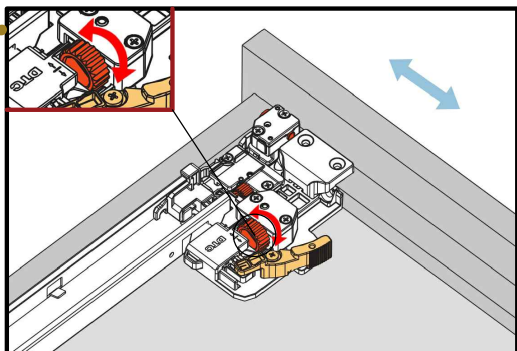


Side adjustment.

21.

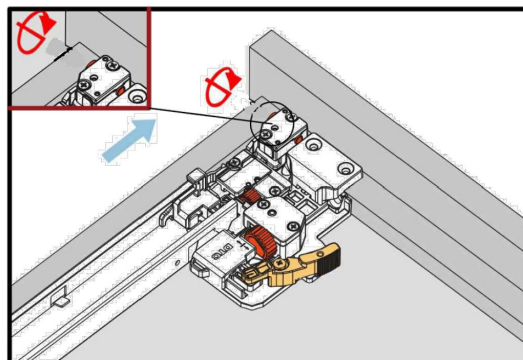

Depth adjustment.

22.

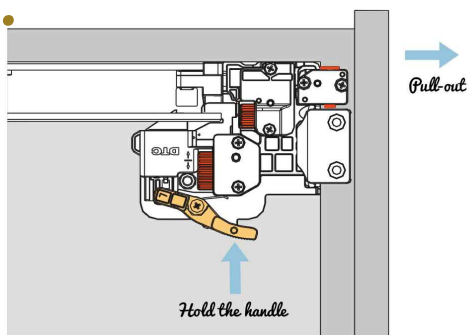

Removal.

23.

